

## **MARKING A WAYPOINT TO GO BACK TO**

- YOU WOULD BE IN MANUAL FLIGHT MODE.
- TOUCH "DJI" LETTERS IN UPPER LEFT HAND CORNER OF THE SCREEN.
- THIS TAKES YOU BACK TO CHOSING YOUR FLIGHT MODE: OPEN "MISSION MODE"
- TOUCH "CREATE A ROUTE"
- TOUCH "WAYPOINT"
- MOVE IN ON THE LOCATION OF YOUR DRONE BY EXPANDING THE MAP IN CLOSER BY SPREADING YOUR FINGERS ON THE MAP.
- TOUCH AND HOLD YOUR FINGER ON THE LOCATION OF YOUR DRONE (THIS CREATES THE STARTING WAYPOINT#1)
- TOUCH AND HOLD ANYPLACE ELSE ON THE MAP AWAY FROM THE DRONE (THIS CREATES WAYPOINT #2)
- "SAVE" THIS ROUTE AND ALSO "CONFIRM YOUR ALTITUDE" FOR THE ROUTE TO ASSURE IT IS HIGH ENOUGH TO RETURN TO WITHOUT HITTING ANYTHING.
- TOUCH "DJI" IN UPPER LEFT HAND CORNER (YOU MAY NEED TO TOUCH IT SEVERAL TIMES) TO EXIT THE "MISSION FLIGHT" APP.
- TOUCH "MANUAL FLIGHT" AND YOU WILL BE BACK TO THE MANUAL FLIGHT SCREEN.
- MANUALLY FLY THE DRONE BACK TO HOME TO EXCHANGE BATTERIES.
- REPLACE BATTERIES AND REENGAGE THE DRONE.
- TAKE OFF USING MANUAL FLIGHT AND GET TO A SAFE ALTITUDE.
- TOUCH "DJI" IN UPPER LEFT HAND CORNER.
- OPEN "MISSION FLIGHT"
- CHOSE THE PROPER "WAYPOINT FLIGHT"
- TOUCH "START" AND THE DRONE WILL FLY TO THE FIRST WAYPOINT IN THE ROUTE
- WHEN THE DRONE ARRIVES AT THE WAYPOINT#1 IT WILL BE BACK AT THE LOCATION YOU MARKED AS YOUR WAYPOINT.
- UPON ARRIVAL AT THAT WAYPOINT, TOUCH THE "RED STOP BUTTON" TO STOP THE MISSION FLIGHT.
- TOUCH "DJI" IN UPPER LEFT HAND CORNER SEVERAL TIMES UNTIL YOU EXIT TO THE MAIN SCREEN.
- TOUCH AND OPEN "MANUAL FLIGHT" TO RESUME NORMAL FLYING.

(NOTE: YOU WILL NEVER HAVE TO GO TO WAYPOINT#2 BUT YOU NEED TO ENTER A SECOND WAYPOINT IN ORDER TO CREATE A ROUTE.)

(NOTE: AFTER FLYING THESE TYPES OF ROUTES, GO INTO MISSION FLIGHT MODE AND DELETE ANY OLD ROUTES CREATED IN ORDER TO NOT CREATE CONFUSION FOR THE ROUTE YOU CREATE DURING AN ACTUAL RESCUE FLIGHT.)